SCOSCHE

# NN1643B

## IN-DASH INSTALLATION KIT FOR SELECT 2008 NISSAN TITAN (NON-NAVIGATION & NON-AUTOMATIC CLIMATE CONTROL)

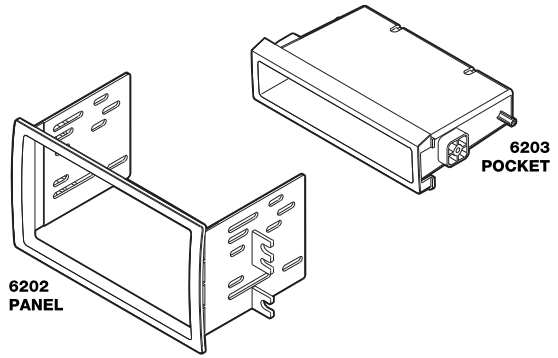


## INTRODUCTION/PRELIMINARY

This premium installation kit is for 2008 Nissan Titan vehicles. Included are all the parts you need to mount your car stereo or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory stereo and assemble the kit.

**WARNING**

**Do not turn key to ACCESSORY or IGNITION position with Airbag Light unplugged from dash bezel!** This will cause a fault code and the Airbag indicator light will flash after the installation is complete. If this error occurs, the fault code must be reset. This can be done at a Nissan dealership or you can follow the steps below.

1. Turn ignition switch from OFF to ON.
2. Within one second after the airbag light starts to flash, turn the ignition to the OFF position.
3. Wait for 6 seconds.
4. Repeat steps 1 through 3 two more times.

**CAUTION**

**DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.**

**NOTES**

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

## FACTORY WIRING CODES

For Factory Wiring Codes go to: **www.scosche-cars.com**

**CAR STEREO CONNECTORS**

**PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.**

| | |
|---|---|
| **NN04B** 2007-Up Nissan | **NAA2B** 2007-Up Nissan Antenna Adapter |

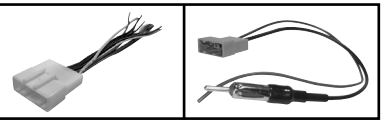

## LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (NN1643B) in 2008 Nissan Titan vehicles. Scosche Industries, Inc. cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

©2008 SCOSCHE INDUSTRIES, INC.



## FACTORY STEREO REMOVAL

**2008 NISSAN TITAN**

1. Using panel removal tool, pop out bezel covering stereo; disconnect harness connectors and remove bezel.
2. Remove (4) Phillips head screws from stereo mounting brackets; disconnect stereo harness connectors and remove stereo.

## KIT INSTALLATION

**DIN-ISO MOUNT**

1. Align the 6203 pocket to the lower edge of the 6202 panel. Secure the 6203 pocket to the 6202 panel's ISO mount brackets with the supplied hardware in the installation kit.
2. Install (2) pocket screws as shown. (See illustration below.)
3. Align, position and bolt the aftermarket ISO-DIN head unit to the 6202 panel's ISO mounting brackets. Use the hardware supplied with the aftermarket DIN-ISO head unit to secure the mounting brackets to the aftermarket stereo.
4. Mount the assembled 6202 panel/aftermarket stereo to factory dash opening. Connect any necessary wiring/connectors before you secure the assembled 6202 panel. Use supplied factory bolts to mount assembled 6202 panel to factory mounting hole locations.
5. Before you align & snap the factory bezel trim over the mounted 6202 panel; check if you need to connect neccessary wiring/connectors. When all connectors have been plugged in, snap the factory bezel trim to dash to complete installation.

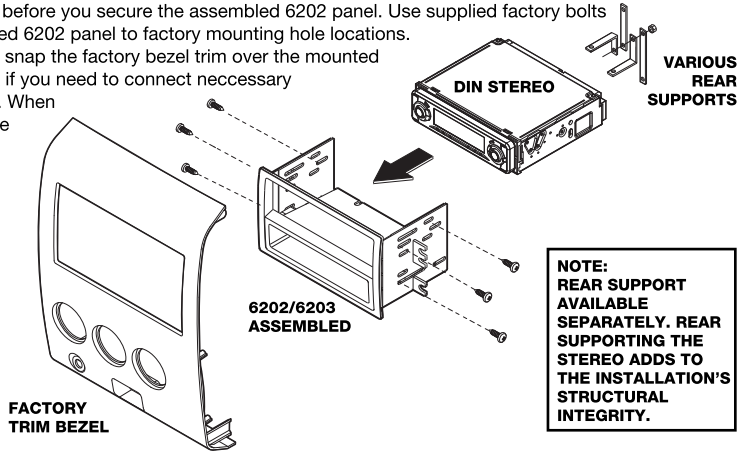


**NOTE:**
**REAR SUPPORT AVAILABLE SEPARATELY. REAR SUPPORTING THE STEREO ADDS TO THE INSTALLATION'S STRUCTURAL INTEGRITY.**

**DOUBLE DIN-ISO MOUNT**

1. Align, position and bolt the aftermarket Double DIN-ISO head unit to the 6202 panel's ISO mounting brackets. Use the hardware supplied with the aftermarket Double DIN-ISO head unit to secure the mounting brackets to the aftermarket stereo.
2. Mount the assembled 6202 panel/aftermarket stereo to factory dash opening. Connect any necessary wiring/connectors before you secure the assembled 6202 panel. Use supplied factory bolts to mount assembled 6202 panel to factory mounting hole locations.
3. Before you align & snap the factory trim bezel over the mounted 6202 panel, check if you need to connect neccessary wiring/connectors. When all connectors have been plugged in, snap the factory trim bezel to dash to complete installation.

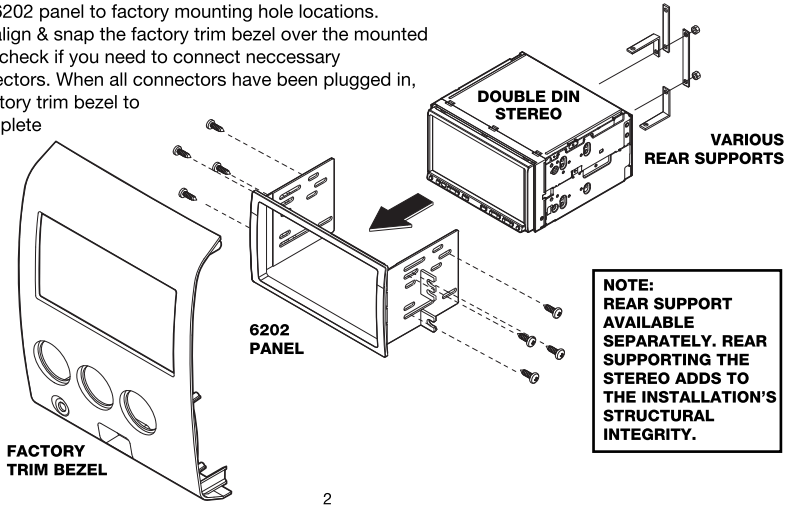


**NOTE:**
**REAR SUPPORT AVAILABLE SEPARATELY. REAR SUPPORTING THE STEREO ADDS TO THE INSTALLATION'S STRUCTURAL INTEGRITY.**